

CM TDC UK

220-240V  
1000W

## PARTS AND FEATURES

1. Filter
2. Funnel
3. Funnel holder
4. Carafe lid
5. Carafe handle
6. Carafe
7. Warning plate
8. Power Switch
9. Water gauge
10. Water tank
11. Top cover

## INTRODUCTION

Thank you for purchasing our product.

In doing so, you have opted for an effective high-performance appliance.

If the instructions on the correct use of this appliance are not observed, the manufacturer shall assume no responsibility for any resulting damage.

The operating instructions may refer to different models: any difference is clearly identified.

## IMPORTANT INFORMATION ON SAFETY

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. This appliance shall not be used by children.
2. Keep the appliance and its cord out of reach of children.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
4. The equipment was designed for household and similar uses such as in:
  - staff kitchen areas in shops, offices and other work environments;
  - farm houses;
  - hotels, motels and other residential environments by the guests;
  - bed&breakfast-type environments.
5. Supervise children to prevent them from playing with the appliance.
6. Turn unit off and unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To disconnect, turn unit off, grasp plug, and pull out from wall outlet. Never yank on cord.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to an authorized service facility for examination, repair, or electrical or mechanical adjustment.
8. Read all instructions.
9. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
10. Do not touch hot surfaces. Use handles or knobs.
11. To protect against fire, electric shock and injury to persons do not immerse cord, plug, in water or other liquid.
12. The use of accessory is not recommended by the appliance manufacturer. It may result in fire, electric shock and/or person injury.

13. The container is designed for use with this appliance. It cannot be used on a range top.
14. Do not clean container with cleansers, steel wool pads, or other abrasive materials.
15. Do not hang power cord over the edge of table or counter, or touch hot surface.
16. Do not place the coffee maker on hot surface or beside fire in order to avoid to be damaged.
17. To disconnect, remove plug from wall outlet. Always hold the plug. But never pull the cord.
18. Do not use appliance for other than intended use and place it in a dry environment.
19. Be careful not to get burned by the steam.
20. 16. Do not let the coffee maker operate without water.
21. Never use the appliance if the carafe shows any signs of cracks. Only use the carafe with this appliance. Use carefully as the carafe is very fragile.
22. Do not set a hot container on a wet or cold surface.
23. Do not use a cracked container or a container having a loose or weakened handle.
24. Scalding may occur if the cover is removed during the brewing cycles.
25. Some parts of appliance are hot when operated, so do not touch with hand. Use handles or knobs only.
26. Never leave the empty carafe on the warming plate otherwise the carafe is liable to crack.
27. Do not set a hot container on a hot or cold surface.
28. Do not use outdoors.
29. Save these instructions.

## BEFORE THE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add clean water up to maximum level to brew several times without coffee powder according to the steps below, and then discard the water. Wash the detachable parts thoroughly with warm water.

## USING YOUR COFFEE MAKER

1. Open the top lid and fill the water tank with cold drinking water. The water level should not exceed MAX level as indicated on water gauge.
2. Put the funnel into funnel holder, then place the filter in the funnel, and make sure it is assembled correctly.
3. Add coffee powder into filter. Usually a cup of

coffee needs a level spoon of coffee powder, but you may adjust according to personal taste. Close the funnel holder, a click sound will be heard when the funnel holder is closed completely.

4. Insert the carafe on warming plate horizontally.
5. Plug the power cord into the outlet.
6. Pressing the switch down, the indicator will be illuminated. The appliance will begin working.



**Note:** during brewing process you may remove the carafe to serve for duration of not exceeding 30 seconds, and the coffee maker can stop dripping automatically. If the serve time exceeds 30 seconds the coffee will overflow the funnel.

7. Upon completion of brewing coffee, that is one minute later after the coffee stops dripping out, you can remove the carafe, pour and serve.



**Note:** the brewed coffee you get will be slightly less than the water you have added as some water is absorbed by coffee powder. DO NOT touch cover, warming plate and so on when operating as they are very hot.

8. When the process is finished, if you do not want to serve immediately, keep the switch on, the coffee can be kept warm in the warming plate for 40 minutes and the appliance will be cut off automatically after 40 minutes. For an optimum coffee taste, serve it just after brewing.
9. Always turn the coffee maker off and disconnect the power supply after use.



**Note:** Be careful when pouring the coffee out, otherwise you would be hurt as the temperature of coffee just finished is high

## CLEANING AND MAINTENANCE



**CAUTION:** Always unplug the product from electrical outlet and allow the warming plate to cool completely before cleaning it. Never immerse the unit or power cord into water or any other liquid for cleaning

1. Clean all detachable parts after each use in hot, sudsy water.
2. Wipe the product's exterior surface with a soft, damp cloth to remove stains.
3. Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the

area with a clean, dry cloth after each use of the product.


4. Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaner to clean it.
5. Replace all parts and keep for next use.


## REMOVING MINERAL DEPOSITS


To keep your coffee maker operating efficiently, periodically you should clean away the mineral deposits left by the water according to the water quality in your area and the use frequency. We recommend decalcifying your coffee maker as follows, using a solution of white vinegar and cold water. A solution of two tablespoons (30ml) white vinegar in one carafe of cold water works best.


1. Fill the tank with the vinegar solution to the maximum level as indicated on water gauge.
2. Insert glass carafe onto the warming plate.
3. Make ensure filter (without coffee powder) and funnel are assembled in place.
4. Switch on the appliance and allow it to "brew" de-scaling solution.
5. After "brew" one-cup solution, switch off the appliance.
6. Leave the solution stay for 15 minutes and repeat step 3-5.
7. Switch on the appliance and run off the solution until the water tank is completely empty.
8. Rinse by operating the appliance with water at least 3 times.


## HINTS FOR GREAT-TASTING COFFEE


 **Note:** a clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "CARE AND CLEANING" section. Always use fresh, cold water in the coffee maker.

 **Note:** store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.

 **Note:** for an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.

 **Note:** do not reuse coffee powder since this will greatly reduce the coffee' flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.

 **Note:** clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.

 **Note:** oiliness may occur more frequently if heavily roasted coffees are used.

## GUARANTEE

**12 months Standard Guarantee  
Enhanced to 2 years upon product registration**

This certificate of guarantee represents the guarantee ("Guarantee" hereinafter) offered by Indesit Company UK Limited with registered office at Peterborough PE2 9JB in relation to products purchased in the United Kingdom and Indesit Ireland Limited with registered office in Dublin 9, Ireland for products purchased in the Republic of Ireland. This Guarantee does not affect your statutory rights.

Your product has the benefit of our manufacturer's Guarantee, which covers the product for twelve months from the date of purchase.

This gives you the reassurance that if, within that time, your product is proven to be defective because of either workmanship or materials, we will, at our discretion, either repair or replace the product at no cost to you.

This Guarantee is subject to the following conditions:

- Documentary proof of original purchase date is provided.
- Cosmetic damage must be reported within 14 days from the date of purchase.
- The product has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The product is used only on the electricity supply printed on the rating plate.
- The product has been used for normal domestic purposes only.
- The product has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us.
- Any repair work must be undertaken by us or our appointed agent.
- Any parts removed during repair work or any product that is replaced become our property.
- The product is used in the United Kingdom or Republic of Ireland.

The Guarantee does not cover:

- Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation.
- Accidental damage, this includes but is not limited to, damage which occurs as a result of an external action.

- Replacement of any consumable item or accessory. These include but are not limited to:
- plugs, cables, light bulbs, hoses, brushes, covers and filters.
- Replacement of any removable parts made of glass or plastic.

## After Sales Service

No one is better placed to care for your Hotpoint product during the course of its working life than us – the manufacturer.

## Essential Contact Information Advice Line

We have a dedicated team who can provide free advice and assistance with your product if you experience any technical difficulties. Simply call our Hotpoint Service Hotline for telephone assistance.

**UK: 03448 240 055**

**Republic of Ireland 0818 904 041**

**[www.hotpointservice.co.uk](http://www.hotpointservice.co.uk)**

**Please note:**

**Our advisors will require the following information:**

Model number:

Serial number:

This information is available on the service label stuck on the back cover of this user manual.

## Consumables and Accessories

We supply a full range of consumables and accessories to keep your product functioning efficiently throughout its life.

**UK: 03448 225 225**

**Republic of Ireland: 0818 313 413**

**[parts.hotpoint.co.uk/shop](http://parts.hotpoint.co.uk/shop)**

## Recycling and Disposal Information

As part of Hotpoint's continued commitment to helping the environment, Hotpoint reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage.

Please dispose of packaging and old products carefully.

### Register your new product and receive 1 additional year FREE!

As an additional benefit of owning your Hotpoint product, we are offering 1 years additional free guarantee. To be eligible for this you will need to contact us to register your product within 28 days of purchase. If you do not register your appliance within the 28 days you will still be entitled to 1 years manufacturer's guarantee. To activate your 2 year guarantee register online at [www.hotpoint.co.uk](http://www.hotpoint.co.uk). Please note that the extended guarantee is only available in the UK and Ireland and is subject to the same terms and conditions as the 1 year guarantee. Please refer to the certificate of guarantee for more information.

## DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European Directive 2012/19/UE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.



The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.





Indesit Company UK Ltd  
Morley Way,  
Peterborough PE2 9JB

[www.indesitcompany.com](http://www.indesitcompany.com)

CM TDC UK  
03/2015 - ver.1.0